VOLVO S80

QUICK GUIDE

WELCOME TO THE GLOBAL FAMILY OF VOLVO OWNERS!

Getting to know your new vehicle is an exciting experience.

Please browse through this Quick Guide to get the full benefits from your new Volvo. For detailed information, please refer to your Owner´s Manual.

Warning texts and other important information are only provided in the Owner's Manual - not in this folder. The Owner's Manual contains the most up-to-date information.

For additional information, contact Customer Service:
U.S.A.: 1-800-458-1552 www.volvocars.us

CANADA: 1-800-663-8255 www.volvocanada.com

Locks the doors and trunk, and arms the alarm.

Unlocks the doors and trunk, and disarms the alarm[1].

Trunk (press once to unlock, press twice to open trunk slightly).

Approach lighting (30 seconds) illuminates lights in door mirrors, cabin, footwells, license plates. Turn signals and parking lights illuminate.

"Panic" alarm. Press and hold to sound the alarm. Press again to deactivate.

[1] Automatic relock occurs if no door/trunk is opened within 2 minutes after unlock.

STARTING THE ENGINE

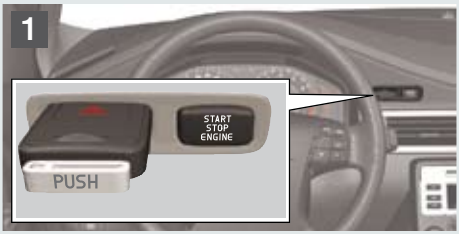

Insert the remote key in the ignition as shown in the illustration, with the buttons upward.

Push lightly on the remote key. The key will be pulled into the slot in the correct position.

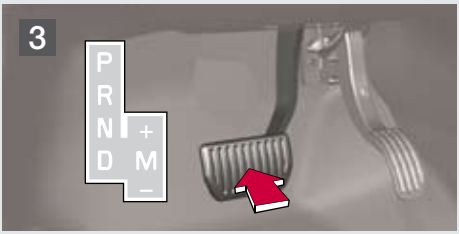

Press the brake pedal.

Press the START/STOP ENGINE button to start the engine[2].

[2] After cold starts, your engine will idle at a higher speed for a short time.

SWITCHING OFF THE ENGINE AND REMOVING THE REMOTE KEY

Park the vehicle and press the START/ STOP ENGINE button to switch off the engine.

Press in the remote key. It will be partially ejected from the ignition slot. The gear selector must be in the **P** position.

PERSONAL CAR COMMUNICATOR (PCC) WITH KEYLESS DRIVE (OPTION)

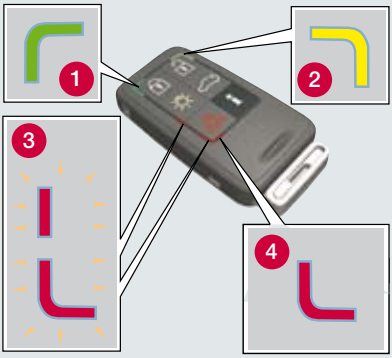

1. **Green light:** Vehicle is locked.
2. **Yellow light:** Vehicle is unlocked.
3. **Flashing red light:** Someone may be in the vehicle.
4. **Red light:** Alarm has been triggered.

Information is gathered when the vehicle is within range. Press the button and wait for 5 seconds. If the button is pressed when the vehicle is out of range, the PCC will use a memory function to show if the vehicle is locked or unlocked.

STARTING WITH KEYLESS DRIVE

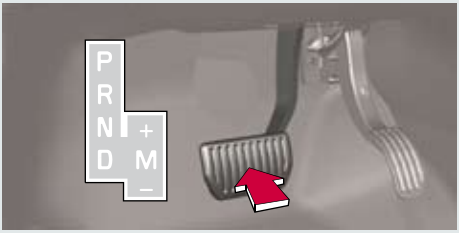

Enter the car with a PCC in e.g., your pocket. **Press the brake pedal.**

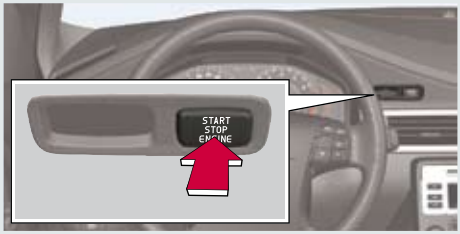

Press the START/STOP ENGINE button to start the engine[1].

[1] After cold starts, your engine will idle at a higher speed for a short time.

SWITCHING OFF THE ENGINE

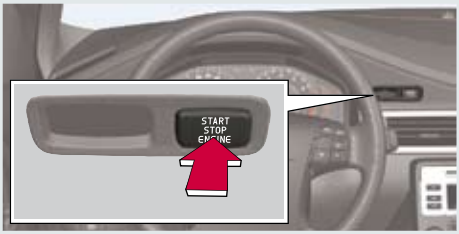

Park the vehicle and press the START/ STOP ENGINE button to switch off the engine.

NOTE

With keyless drive, it is only necessary to have a PCC in the passenger compartment. Keep it e.g., in your pocket when driving or when you leave the vehicle.

The door unlocks automatically when its outside handle is pulled.

When the vehicle is parked, simply press a button in one of the outside door handles to lock the vehicle. You must have a remote key in your possession and all doors and the trunk must be closed.

LEATHER CARE

Leather upholstery requires regular care. Treat the leather with protectant cream, one to four times a year as necessary. Consult your Volvo retailer for leather care products.

BLIS – BLIND SPOT INFORMATION SYSTEM (OPTION)

If the BLIS indicator lights illuminate even when there are no vehicles in the blind area, this may be due to light reflected from a wet road surface, the vehicle's own shadow against a large, light, smooth surface, or sunlight directly in the camera when the sun is low on the horizon. In the event of a fault, **Blind spot syst. service required** will be displayed.

AUDIO SYSTEM

1 POWER/VOLUME

Press for on/off.
Turn to adjust volume. Radio and Volvo Navigation System (option) volume are stored individually**.**

2 Select AM, **FM1**, **FM2**, **CD**, or **MODE**.
Use **MODE** to activate Sirius satellite radio (option), the accessory iPod interface or AUX for e.g., MP3 player, and to adjust the auxiliary device's volume. Set the iPod/MP3 player's volume to medium for best sound quality.

3 Sound settings
Press to select e.g., BASS, TREBLE, etc.
Turn to adjust.

BLUETOOTH®

1. Make the cell phone searchable/visible.
2. Press the **PHONE** button on the audio system control panel briefly.
3. Select "Add phone" in the audio system display.
4. Select the cell phone to be connected.
5. Enter the numbers shown in the audio system display using the cell phone's keypad.

RADIO

3 Turn to select a station

4 Search for stations with the left/right arrows. Store up to 20 stations by holding in buttons 0–9 in FM1 och 0–9 in FM2. A message is displayed when a station has been stored.

5 Autostore the 10 strongest stations
Press AUTO for 2 seconds. AUTOSTORING... is displayed while the search is in progress.
Select and listen to a stored station using buttons 0–9.

CD[1]

4 Change tracks with the left/right arrows, or turn (3).
Select a CD (optional CD changer only) with the up/down arrows.

6 CD eject

Press to eject current CD.

Press and hold to eject all CDs (optional CD changer only).

7 CD changer (option): select CD 1–6.

[1] CDs containing files in MP3 and WMA formats can also be played

FOLDING THE REAR SEAT BACKREST

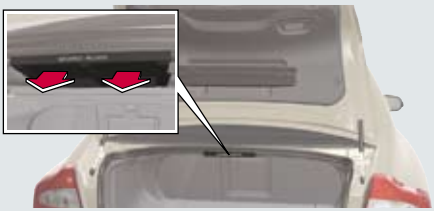

Pull the respective handles to fold down the left and/or right sections of the backrest.

The rear head restraints must be in the upright position. **Fold down the backrest.**

ELECTRONIC CLIMATE CONTROL—ECC

AUTOMATIC CONTROL

In **AUTO** mode, ECC controls all functions automatically and makes driving more pleasant with optimal air quality.

1. **Temperature**
   Turn the control to the desired temperature. The set temperature is shown in the display.
2. **Press AUTO** to automatically control the temperature and other functions.

MANUAL CONTROL

	Blower speed
	Air distribution
	Defroster quickly removes mist from the windshield and front, side windows.
	Recirculation.
AC	**Air conditioning** off/on

STORAGE SPACES, 12-VOLT SOCKET & AUX CONNECTOR

The center console's **front** and **rear 12-volt sockets** function in ignition mode **I** or higher.

CAUTION

Using the 12-volt sockets with the engine switched off will drain the battery.

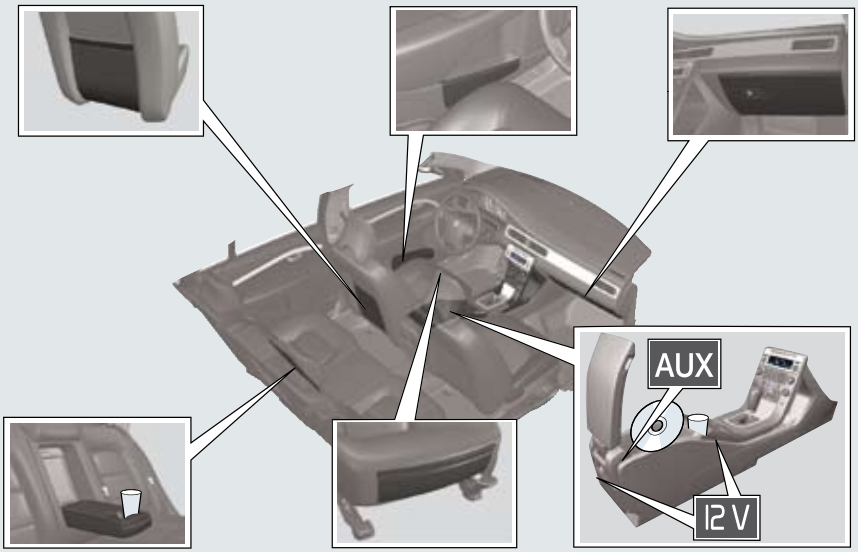

ODOMETER AND TRIP COMPUTER

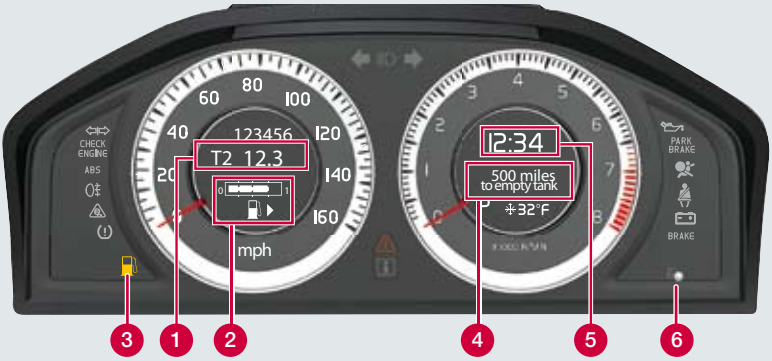

1 Trip odometer
The vehicle has two separate trip odometers, T1 and T2, which are always active.
Press (6) for 2 seconds to reset the currently displayed trip odometer.
Press (6) briefly to toggle between T1 and T2.

2 Fuel gauge
The arrow show the side of the vehicle that the fuel filler door is on.

3 Low fuel level indicator
When the symbol illuminates, refuel as soon as possible. The fuel level indicator in the gauge moves from right to left as the amount of fuel in the tank decreases.

4 MILES TO EMPTY TANK
Use the trip computer's thumb wheel (8) to display the calculated distance until the fuel tank is empty.

NOTE

MILES TO EMPTY TANK is an approximation, based on recent average fuel consumption.

5 Clock
Turn the control (6) clockwise or counterclockwise to set the clock.

6 Multi-function control
Press to reset or toggle between trip odometers T1 and T2.
Turn to adjust the clock.

7 READ
Press to read messages in the display. Press again to confirm the message.

8 Trip computer
Display the desired trip computer information by turning the thumb wheel.

9 Resets all functions

STEERING WHEEL ADJUSTMENT

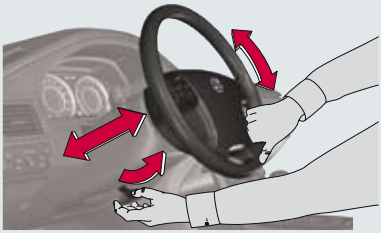

WARNING! Never adjust the steering wheel while driving.

REFUELING

Press the button to open the fuel filler door

LIGHTING PANEL

High beam flash.
Toggle between **high/low beams**.

	Display & instrument panel lighting
	Front fog lights
	Rear fog light
0	**Automatic headlights.** High beam flash only.
	Parking lights
	Headlights: turn off when ignition is switched off, high/low beams can be selected with the lever.

DRIVER'S DOOR CONTROL PANEL

	Lock/unlock all doors.
	Retractable door mirrors (option), press L and R at the same time.
L R	**Door mirror controls**
1	**Open/close a window partially**
2	**Open/close a window fully**
	Cutout switch for rear windows and doors (option) (child safety locks)

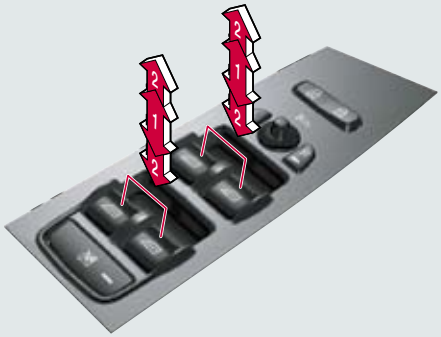

WINDSHIELD WIPERS AND RAIN SENSOR (OPTION)

RAIN SENSOR

A Press to activate the rain sensor when the lever is in position 0.

B Turn to **adjust rain sensor sensitivity.**

	Symbol in display (rain sensor on)
C	**Single wiper sweep**
D	**Intermittent wipers.** Turn (B) to adjust interval.
E	**Normal speed**
F	**High speed**
G	**Windshield/headlight washers**

IGNITION MODES (MODES 0 AND I)

The brake pedal must **not** be depressed.

REMOTE KEY

Mode 0

Mode I

PCC & KEYLESS DRIVE

Mode I

Audio system/interior lighting function regardless of ignition mode.

0	Instrument/clock lighting, steering wheel lock/unlocked.
I	Power moonroof/windows, blower, ECC, wipers, 12-volt sockets in center console, Volvo Navigation System.

ADJUSTING THE FRONT SEAT

1. **Lumbar support**
2. **Backrest tilt**
3. **Raise/lower the seat**
4. **Raise/lower the front edge of the seat cushion**
5. **Forward/rearward**

ELECTRIC PARKING BRAKE

Setting

1. Press the button.

Ⓟ Light flashes until brake is fully applied, then glows continuously.

Releasing

Ignition mode **0** or higher.
Press brake pedal.

2. Pull out button.

Release automatically

Select a gear and begin driving. The parking brake will release automatically (the driver's seat belt must be fastened).

TP 10046 (USA & Canada) AT 0820. Printed in Sweden, Göteborg 2008, Copyright © 2000-2008 Volvo Car Corporation